

## Video player



Please read the manual carefully before use. Technical specifications are subject to change without prior notice

### Battery precautions:

1. Do not put the battery into the fire.
2. Do not put the battery in a humid place to prevent short circuit.
3. If the battery is not used for a long time, please remove the battery from the device. Note that the manufacturer shall not be liable for battery leakage or corrosion.

 
### Power supply instructions:

When the machine is not in use, the power plug must be pulled out. When the power supply is removed from the power socket. When adapter, be sure to grasp the adapter seat body, do not pull the wire to pull out in case of electric shock, do not touch the power adapter in use with wet hands.

### Suffocation hazard:

All packaging materials (e.g. tape plastic bags, labels, plastic sheets, binding lines) and Do not let children under three years old contact with small accessories in order to avoid suffocation. And under the supervision of adults.


### Key function

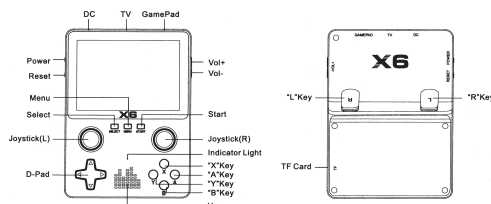

DC  
TV  
GamePad  
Power  
Reset  
Vol+  
Vol-  
Menu  
Select  
Start  
Joystick(L)  
Joystick(R)  
D-Pad  
"A"Key  
"B"Key  
"X"Key  
"Y"Key  
"L"Key  
"R"Key  
TF Card

DC port  
TV port  
GamePad port  
Power key  
Reset key  
Volume + key  
Volume - key  
Menu/Pause/Back key  
Select/Coin key  
Start key  
3D joystick arrow keys  
3D joystick function keys  
Arrow keys  
Game function A key/Confirmation key  
Game function B key/Back key  
Game function X key  
Game function Y key  
Game function L key  
Game function R key  
TF card port

### Video output connected to TV

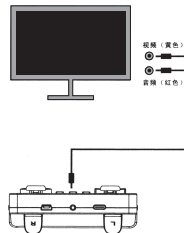 

be careful:

1. Before connecting the TV, please make sure that the TV and the machine are turned off.
2. Switch TV channel to audio / video channel.

Accessories: AV output line, USB power line.  
This product must use special additional: AV output line, USB power line.  
Unauthorized use of other accessories will not be responsible for any problems.

## Troubleshooting

problem	Solution
Flicker or distortion of image	Turn off the player and restart it, or press and hold the select key
There is no image on the LCD or TV screen	Is the TV on Check whether the battery is installed correctly and check whether the battery power is too low Is the AV input on the TV connected correctly
No sound	Are there any loose or disconnected wires Check that the battery level is too low Player or TV volume too low or off
The player doesn't turn on	Is the battery installed correctly Check that the battery level is too low

### Packaging accessories

Packaging accessories					
machine	USB power cable	Avline	Color box	instructions	certificate
1	1	1	1	1	1

 
Subject to change without notice

### Product warranty card

User name	Gender	Age
mailing address		
contact number	Postcode	
Place of purchase		
Place of purchase	Sales Order No	
Product name and specification	Serial No	
Dealer signature	User signature	

When the ambient temperature is less than 0 °C, the machine should be moved indoors and placed at room temperature for 1 hour before use

## 视频播放器



使用前请认真阅读说明书，技术规格如有变动，恕不另行通知。

### 电池注意事项：

1. 请勿将电池投入火中。
2. 请勿将电池放在潮湿的地方以防短路。
3. 如果电池长时间不使用请从设备中取出电池。注意制造商不承担因电池泄露或腐蚀而导致的任何责任。

 
### 电源使用须知：

当本机放置不用时，须拔掉电源插头。当从电源插座卸下电源适配器时，一定要抓着适配器座身，不要拉着导线拔，为防止触电事故，请勿用潮湿的手触碰使用中的电源适配器。

### 窒息危险：

所有包装材料（如胶带塑料袋、标签、塑料片、捆绑线）以及机内细小配件切勿让三岁以下儿童接触，以免发生窒息危险，并在成年人监护下使用。


### 按键功能

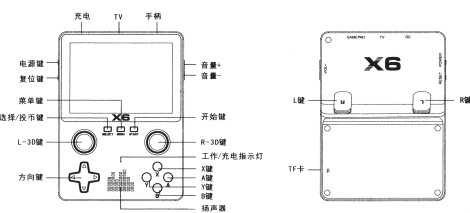

充电  
TV  
手柄  
电源键  
复位键  
音量+  
音量-  
菜单键  
选择/投币键  
开始键  
L-3D键  
R-3D键  
方向键  
A键  
B键  
X键  
Y键  
L键  
R键  
TF卡

USB电源线连接端口  
AV输出线连接端口  
手柄连接端口  
电源开关键（长按关机）  
复位/重启  
增大音量  
减小音量  
菜单/暂停/返回键  
选择键/投币键  
开始键  
3D摇杆方向键  
3D摇杆功能键  
方向键  
游戏功能键/确认键  
游戏功能键/返回键  
游戏功能键  
游戏功能键  
游戏功能键  
游戏功能键  
TF卡端口

### 视频输出连接到电视

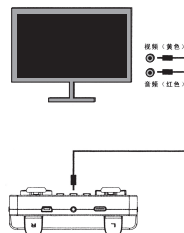 

注意：

1. 在连接电视之前，请确保电视和本机器已关闭。
2. 将电视频道切换到音频/视频频道。

随机配件:AV输出线、USB电源线。  
本产品必须使用专用附加：AV输出线、USB电源线。  
未经授权使用其他配件将不会对任何问题负责。

## 故障排除

问题	问题
图像闪烁或失真	关闭播放器重新开机,或长按 ESELECT键
液晶屏或电视屏幕上没有图像	电视是否开启 电池安装是否正确 检查电池电量是否过低 电视机上的AV输入是否正确连接
没有声音	是否有任何连接松动或断开 检查电池电量是否过低 播放或电视音量太低或关闭
播放器不开机	电池安装是否正确 检查电池电量是否过低

### 包装配件

包装配件					
机器	USB电源线	AV线	彩盒	说明书	合格证
1	1	1	1	1	1

如有更改，恕不另行通知

### 产品保修卡

用户姓名	性别	年龄
通信地址		
联系电话	邮编	
购买地点		
购买日期	销售单号	
品名及规格	机身编号	
经销商签名	用户签名	

当环境温度小于0度时,应把机器移到室内且在室温下放置1小时后使用

成品:70x111mm